

MANUAL INSTRUCTION

Important safety measures when using the element:

Please read the following instructions with attention! We recommend keeping this manual safe for future reference.

- To reduce the risk of asphyxiation of small children, please remove and safely discard all plastic packaging accompanying the product;
 - This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capability or with no experience or knowledge, unless supervised or instructed on how to use the appliance by a person who take responsibility for their safety;
 - Always supervise children to ensure they do not play with the appliance;
 - Do not leave cardboard, plastic, paper or other flammable materials near the appliance;
 - Do not place the chafing dish near the edge of counters or tables during use. Make sure the surface is level and clean;
 - Position the chafing dish at a minimum distance of 20 cm from walls, curtains, fabric and other heat-sensitive materials;
 - Always use the chafing dish on stable, heat-resistant surfaces.
- Do not use the chafing dish on surfaces covered by a cloth or near curtains or other

flammable materials;

- Before using, make sure the chafing dish is correctly assembled.
- Always make sure the chafing dish has cooled before moving, disassembling, cleaning and storing it, or when it is not in use or is left unsupervised;
- The chafing dish must not be cleaned with a water jet.

Instructions


Product parameters

Product name: Electric chafing dish	
Model: YX001/YX002/7801-E/7802-E	Material: PBT water pan + SS 201 body + SS 304 food pan
Rated power: 600W	Voltage: 220V
Heating temperature: 20-100℃	
Recommended heating temperature: 40℃- 80℃	
CERTIFICATE NO.: ISETC.000720210625	

- Please check the power supply voltage on the nameplate and product line before use, and ensure reliable grounding.

- Add hot water (for better temperature efficiency) into the water pan;
 - Add the hot food into the food pan;
 - Connect the power, press and hold the left button turn on (light will glow) or off for 2 seconds.
 - Right button “+” to increase the temperature, “-” button to reduce the temperature.
- Recommended heating temperature: 40°C - 80°C;
- Unplug the power plug when the product is not in use.



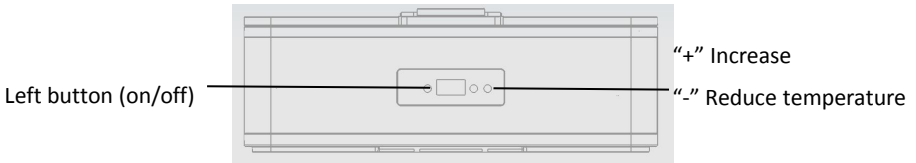

CLEANING AND MAINTENANCE

- Spilled food should be removed immediately from all exterior surfaces. Also, it is important to clean the chafer after use. To remove dirt or marks from the chafer, it is best to wipe with a soft, damp cloth. Only the stainless steel food pan and glass lid are washable. The chafer must not be cleaned using a high-pressure jet.
- The lid could be removed before cleansing.